


TAMAGOTCHI CONNECTION

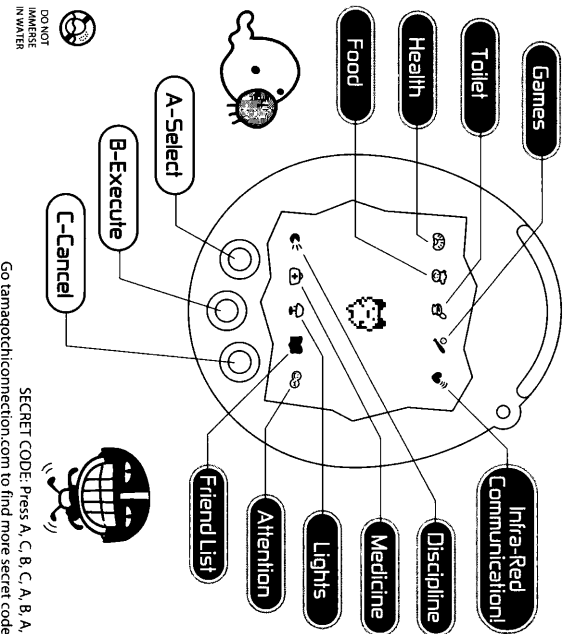

1 Tamagotchi Connection is an interactive virtual pet that will evolve differently depending on how well you take care of it. Play games with it, feed it food and cure it when it is sick and it will develop into a good companion!

Tamagotchi Connection has some special functions!

- 1- It can communicate with other Tamagotchi friends, play games, and exchange gifts.
- 2- You can store up to 50 friends' names in your Tamagotchi friend list!
- 3- It can use play with or wear the gifts it receives.

HOW TO WAKE YOUR TAMAGOTCHI

- 1- Pull out the tab from the side of the casing and Tamagotchi will appear after a long beep.
- 2- To reset, press the Reset button on the back of the casing with a pointed object such as a pen.

NOTE: do not apply too much pressure, especially with a sharp object.

- 3- Set up Time and Date. Press button (B), the time screen will appear. Month, days, hours and minutes will be set up one by one using button (A) to scroll and button (B) to choose/set the correct number.

NOTE: As some special events occur on specific dates, please set up the date carefully.

- 4- Set up your birthday month/date... Tamagotchi might celebrate your birthday.
- 5- It will then return to the normal screen. After 1 minute, you will discover if your Tamagotchi is a boy (black) or a girl (white).

THE GROWTH PROCESS

Your Tamagotchi can evolve in different stages depending on how you care for it.

Egg → baby → child → teenager → adult

HOW TO MAKE YOUR TAMAGOTCHI GROW

Health Meter, Toilet, Games, Connection (IR), Attention

Tamagotchi needs something to eat.

Tamagotchi is in a bad mood.

Discipline, Medicine, Lights, Friend List

NAME

6- Select your Tamagotchi name using button (A) to scroll through the alphabet and button (B) to choose.

Your Tamagotchi name can contain up to 5 letters. Once you have selected a name, you cannot change it.

FRIENDSHIP LIST

Use button (A) to select the "Book Icon" and button (B) to check your list of "friends" and "resents".

FRIENDSHIP LEVEL Use button (A) to select "friend" and button (B) to choose. Press button (B) again to check your level of friendship. Your friendship level improves the more connections you make with other Tamagotchi. Friendship levels are shown below:

1 (1 dot) → 2 (2 dots) → 3 (3 dots) → 4 (4 dots) → 5 (5 dots) → 6 (6 dots) → 7 (7 dots) → 8 (8 dots) → 9 (9 dots) → 10 (10 dots)

Acquisition: Study, Friend, Goodfriend, Bestfriend, Show

IF YOUR TAMAGOTCHI PASSES AWAY

Your Tamagotchi will pass away if you don't take good care of it. If you want to start again, press and hold buttons (A) and (C) until a new egg appears. It will hatch after a few minutes.

HOW TO SET UP TIME

To change time in normal screen mode, press button (B).

To show current time, press and hold buttons (A) and (C) together until the setting time mode starts.

Select 12H or 24H clock format. Press button (A) to select and button (B) to choose/set.

RESET OPTION

When to reset?

- If it is the first time you have activated your Tamagotchi.
- If the screen is not clear, image freezes and does not move after a long time.
- When you have changed the battery.

After pressing the reset button, you can choose either "DOWNLOAD" or "RESET".

THE MATCHMAKER

When your Tamagotchi grows old without finding a partner, a matchmaker may appear to try and find you a partner. If you are unable to find a suitable partner, your Tamagotchi will continue to grow old until it passes away.

2 **HOW TO TAKE CARE OF YOUR TAMAGOTCHI**

HEALTH METER

Select the Health Meter icon with button (A) to check the following information regarding your Tamagotchi: Level of Hunger - Level of Happiness - Level of Training - Age - Weight - Name - Gender - Generation.

LEVEL OF HUNGER/LEVEL OF HAPPINESS

The number of hearts you have indicate your Hunger/Happiness (the more the better).

LEVEL OF TRAINING

Number of dots indicates level of training (the higher the better).

AGE/WEIGHT/NAME

Every day your Tamagotchi lives, it becomes around 1 year older. Keep it healthy and don't allow its weight to increase too much.

GENDER/GENERATION

Check the gender of your Tamagotchi: boy or girl. Check your Tamagotchi's generation. If your Tamagotchi receives a Tamagotchi egg on the screen, it will become the next generation of your Tamagotchi.

FEEDING TIME

Press button (A) to select the "food icon". Then press button (B) to choose meal, snack or treat. Check your Tamagotchi's hunger level before feeding or it might get sick or become overweight.

SINGLE PLAYER GAMES

As your Tamagotchi grows at each stage of life, the number of games to be played increases to four total games. Press button (A) to select "Game" and press button (B) to choose a game you want to play.

JUMP GAME

Press button (A), (B) or (C) in 0.5 sec. when the appropriate light comes on.

BUMP GAME

Press button (A) to stop the bar. The length of the bar determines the power level.

HEADING GAME

Press button (A) or (C) to move your Tamagotchi left or right, then press button (B) to make it head the ball.

SLOT GAME

Press button (A) to choose how many points you want to bet (1 to 9), then press button (B) to reel the slot wheels.

TOILET/FLUSH

When your Tamagotchi makes a mess, press button (A) to select the "Toilet Icon" and use button (B) to clean up.

WARNING: CHOKING HAZARD - Small parts. Not for Children under 3 years.

CAUTION: Keep batteries away from children. Batteries may be harmful if swallowed. Requires 1 CR-2032 (3V) battery. Battery included. NOTE: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Dispose of used batteries properly.

5 If you select "DOWNLOAD" your Tamagotchi will be restored from the last major event - waking up, growing up, IR communication.

Note: You may need to reset the time. If you select "RESET", your Tamagotchi will restart from the very beginning. This will erase all entries (friends and gifts) from your friend list.

HOW TO REPLACE BATTERY

Requires 1 CR-2032 3V battery. Using a small screwdriver, turn the screw counter clockwise to loosen. Remove back as shown, and remove the old battery. Insert the new battery as indicated in illustration.

PAUSE MODE

To place Tamagotchi in PAUSE mode: Press and hold button "A", then press button "B". "PAUSE" will appear on screen below your Tamagotchi character. The character will remain frozen until taken out of PAUSE mode. To take Tamagotchi out of PAUSE mode: Press and hold button "A", then press button "B". "PAUSE" will disappear from the screen and your Tamagotchi character will begin to move again. While in PAUSE mode, the clock will continue to run, but Tamagotchi's growth stops until taken out of PAUSE mode.

SHOP

Items or special food can be bought with the "Couch-Points" you earn. Press button (A) to select "Shop" and press button (B) to choose an item or food you want to buy.

Did you get secret codes?

At the shop screen, press button (A) three times in 2 sec. after pressing button (A) once. When the shop owner's face appears, punch in the secret code revealed in the first page (left); there are 5 total secret codes, each revealing something different. Input all 5 secret codes to reveal a special skin (left).

ITEMS

Press button (A) to select "Item" and press button (B) to choose an item you want your Tamagotchi to play with. Not all items can be played with all Tamagotchi characters.

CONNECTION/COMMUNICATION

(Using IR SENSORS)

- 1- Press button (A) to select the "IR Icon". Choose the Tamagotchi version you friend has by pressing (A) then (B) to select.
- 2- Choose "Game" or "Present". See below for command's details.
- 3- "STAND BY" appears on the screen.
- 4- Position the infrared top of one Tamagotchi towards the infrared top of the other.
- 5- Press button (B) to start IR communication.

COMPETING GAMES

4 fun competing games are randomly played.

PRESENTS

You may send your favorite present to your friend. Choose a present and wrap before sending. See "FRIEND LIST" section to wrap the present in advance.

DISCIPLINE

Sometimes your Tamagotchi can be very naughty or may just need a pat on the back. Use button (A) to select the "Discipline Icon" and button (B) to choose either time out (when naughty), or praise to cheer up your Tamagotchi.

When to discipline?

- When it calls/beeps even when it's not hungry.
- When it refuses food even when it is hungry.

HEALTH

When the "Skill Icon" appears, your Tamagotchi is sick. Use button (A) to select the "Health Icon" and button (B) to nurse your Tamagotchi back to health. Sometimes it takes more than one dose of medicine!

LIGHTS

When your Tamagotchi goes to sleep, turn off the lights. Use button (A) to select the "Light Icon" and button (B) to choose "Lights Off".